



## Installation Instructions

**READ ENTIRE DIRECTIONS BEFORE INSTALLING**

**PLEASE REMEMBER TO TURN THE POOL PUMP "OFF" BEFORE YOU BEGIN**

Before beginning the install, you must first unscrew your return jet eyelet from the wall housing. If the eyelet comes off without the eyelet housing you will also need to remove the eyelet housing, using a removal tool. After the eyelet *and* housing are removed, you can begin to install your new Heat Snorkel(s).

1. Unscrew the Elbow with Velocity Control from the Heat Snorkel body.
2. Screw the Elbow Assembly into your wall return.  
(We recommend you wrap Teflon tape around the threaded area of the elbow before installing. This will help you adjust or remove the elbow at a later time. **Do not over-tighten the elbow**, 4 to 5 turns should be good. Also, make sure you have not cross-threaded the elbow, before you start tightening it)
3. Screw the Heat Snorkel body back into the Velocity Control Elbow.
4. You can now rotate the Heat Snorkel to any position.
5. Be sure to tighten the lock ring once you have positioned the Heat Snorkel to it's location.
6. Turn your pump back "**ON**", and start enjoying the many benefits of Heat Snorkel Technology.

***Although the Heat Snorkel will provide many benefits to the Pool Owner and the Environment, it should Always be Used with Caution.***



***Do Not Use as a Step***

***Do Not Stand on the Heat Snorkel***

***Not To Be Used as a Life Saving Device***

***Caution: Can Exert High Pressured Water – KEEP AWAY from Face and Orifices***

***Younger Children Require Adult Supervision***

***Never Install any Heat Snorkel Product without Prior Filling of Drained/Winterized Pool Lines***

***Thank you from The Heat Snorkel Company for taking a small step to better our planet.***

